


Talkback Mics

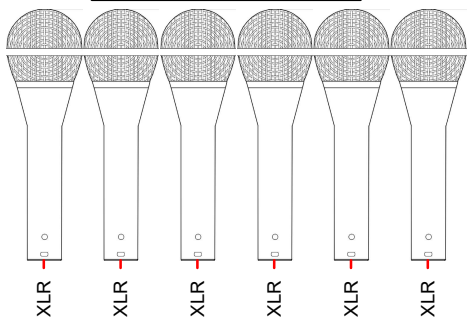


XLR



COMP



XLR

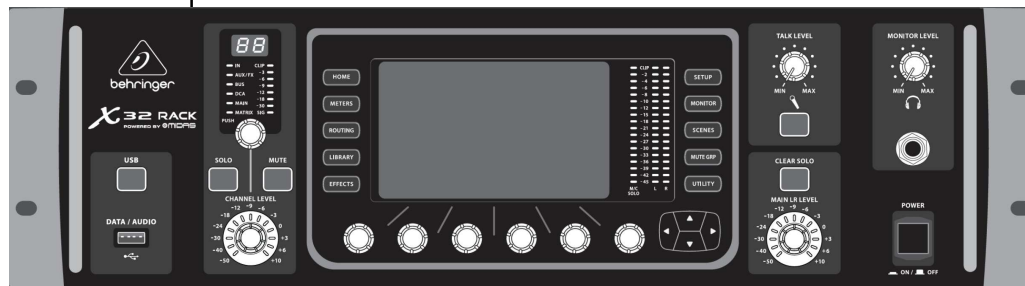

USB

CAT5e

PC

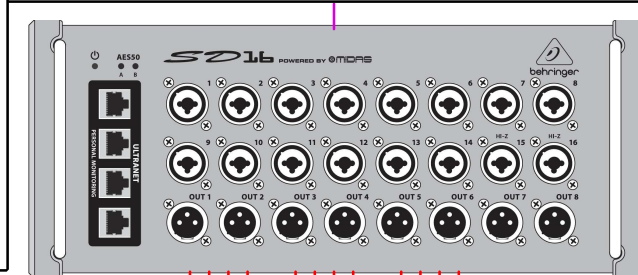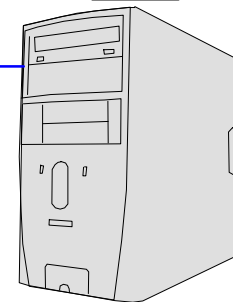

CAT5e


Inputs

R R R R R
X X X X X
X L

X L R R R
X X X X X
X L

R R R R R
X X X X X
X L

Monitoring

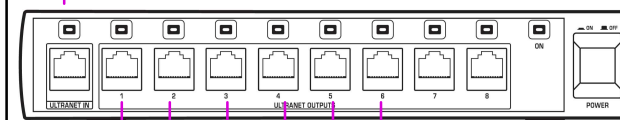

CAT5

CAT5

CAT5

CAT5

CAT5

CAT5

32In/24Out
6 Personal
Monitors









CAT5

CAT5

CAT5



Drum
Booth
Lines

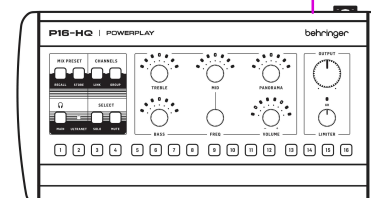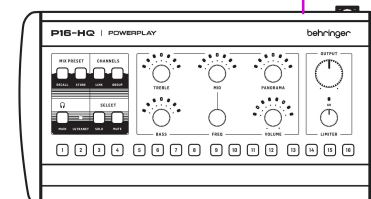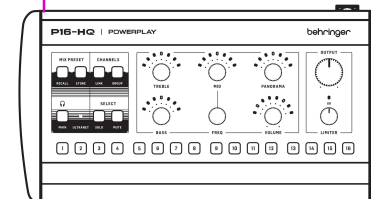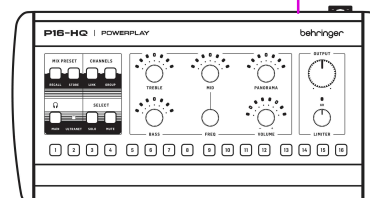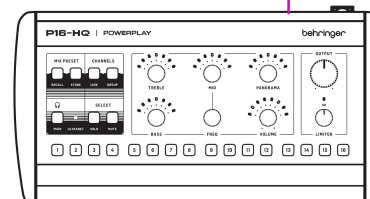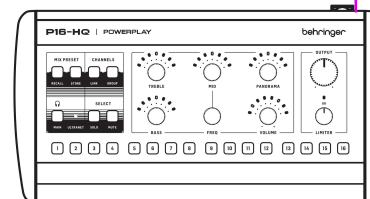



RCA
RCA

Sub is M/C Fader on X32R
Sub receives signal from
Aux Out 5/6 on X32R



TRS
TRS

PatchBox receives signal
from Aux Out 3/4 on X32R

By default, Aux Out 3/4 is
the Master L/R Mix

PatchBox outputs send
signal to Yamaha MG16XU,
lounge area speakers,
drum throne, etc.



XLR
XLR

Hum Eliminator receives signal
from Local Outputs 7-8 on X32R



XLR
XLR



TRS
TRS